


10 Operating Instructions and Installation

10-1 Front

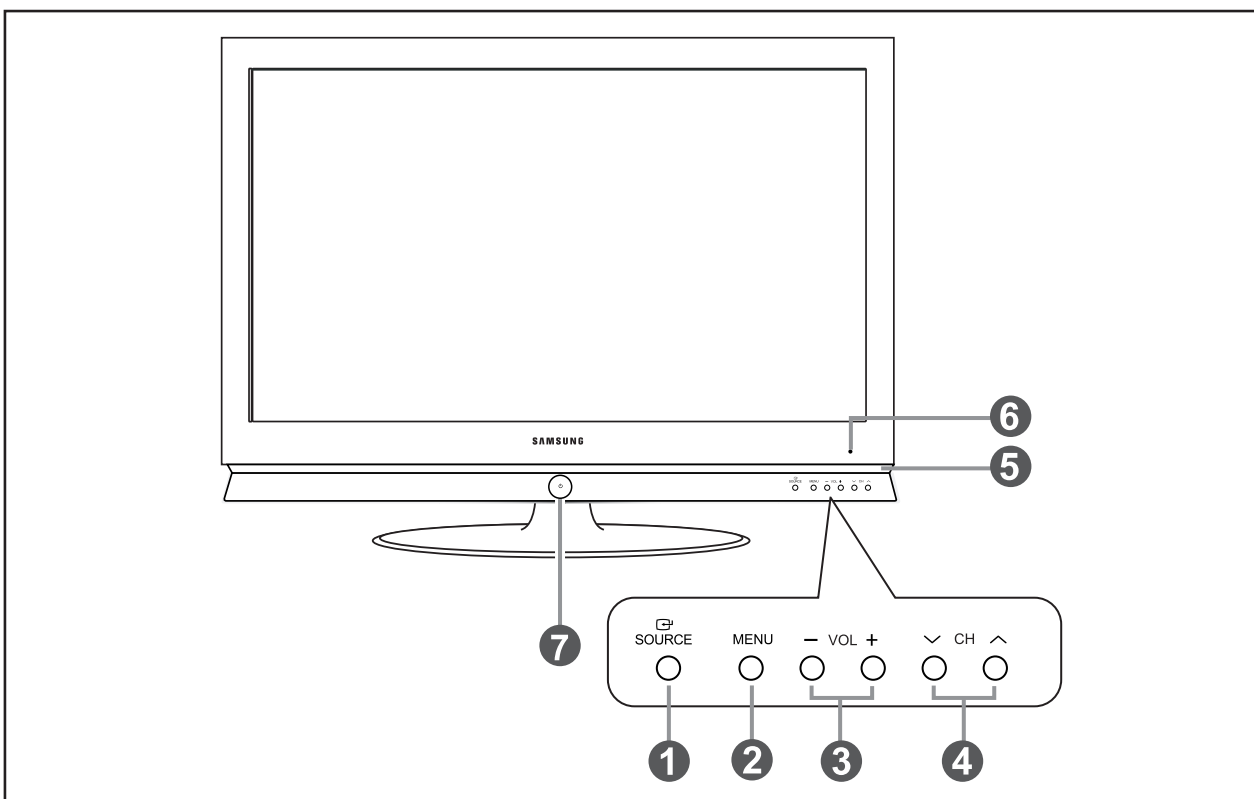

- The product color and shape may vary depending on the model.

1. SOURCE

Toggles between all the available input sources (TV, AV1, AV2, S-Video1, S-Video2, Component, PC, HDMI1, HDMI2).

In the on-screen menu, use this button as you would use the ENTER  button on the remote control.

2. MENU

Press to see an on-screen menu of your TV's features.

3. + VOL -

Press to decrease or increase the volume.

In the on-screen menu, use the + VOL - buttons as you would use the ◀ and ▶ buttons on the remote control.

4. ∨ CH ∧

Press to change channels.

In the on-screen menu, use the ∨ CH ∧ buttons as you use the ▼ and ▲ buttons on the remote control.

5. SPEAKERS

6. REMOTE CONTROL SENSOR

Aim the remote control towards this spot on the TV.


7. (POWER)

Press to turn the TV on and off.

POWER INDICATOR

Blinks and turns off when the power is on and lights up in stand-by mode.

10-2 Connection Panel

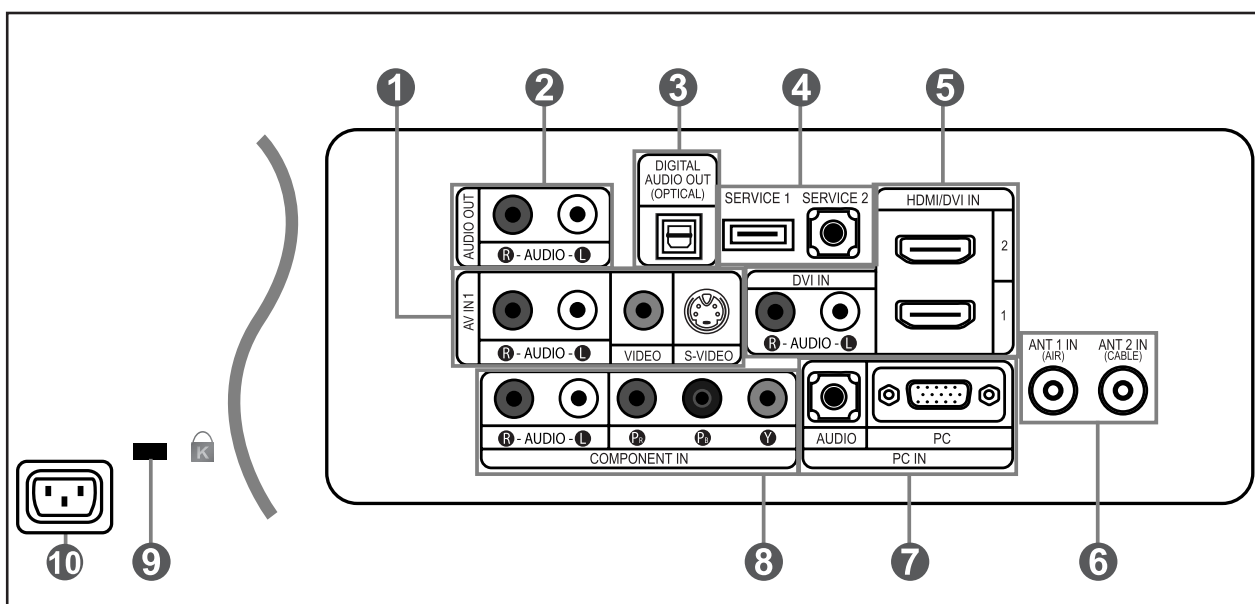

1. AV IN 1

Video and audio inputs for external devices, such as a camcorder or VCR.

S-VIDEO IN 1

Connect an S-Video signal from a camcorder or VCR.

2. AUDIO OUT (L/R)

Connect to the audio input jacks on your Amplifier/ Home theater.

3. DIGITAL AUDIO OUT (OPTICAL)

Connect to a Digital Audio component.

4. SERVICE 1/SERVICE 2

Connector for service only.

5. HDMI/DVI IN 1/2, DVI IN (AUDIO L/R)

Connect to the HDMI jack of a device with an HDMI output.

Use the HDMI/DVI terminal for DVI connection to an external device. You should use the DVI to HDMI cable or DVI-HDMI adapter (DVI to HDMI) for the connection, and the DVI IN 'R -AUDIO -L' terminal for audio.

- HDMI/DVI IN terminal does not support PC.
- No sound connection is needed for an HDMI to HDMI connection.

6. ANT 1 IN/ANT 2 IN

Connect to an antenna or cable TV system.

7. PC IN

Connect to the video and audio output jacks on your PC.

8. COMPONENT IN

Connect component video/audio.

9. KENSINGTON LOCK

The Kensington lock (optional) is a device used to physically fix the system when used in a public place.

If you want to use a locking device, contact the dealer where you purchased the TV.


- The place of the Kensington Lock may be different depending on its model.

10. POWER INPUT

Connect the supplied power cord.

10-2-1 Side Panel Jacks

- Use the left side panel jacks to connect a component that is used only occasionally, such as a camcorder or video game.

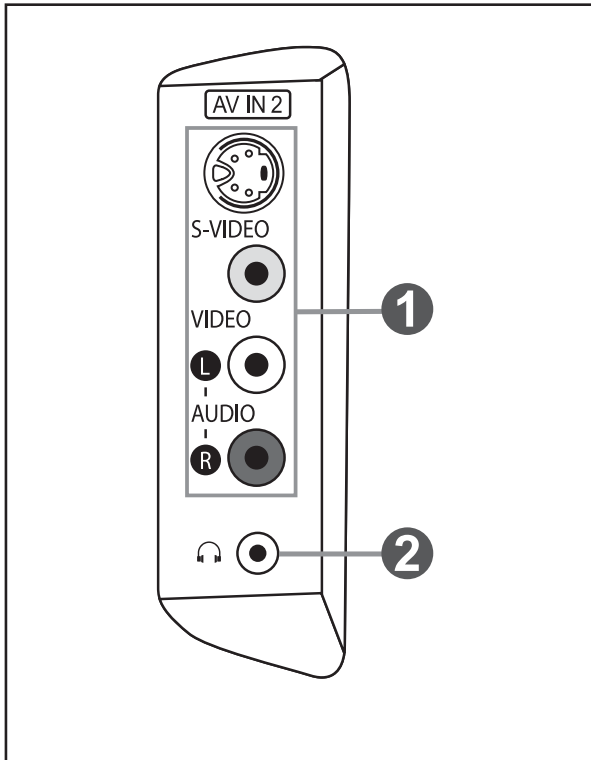

1. AV IN 2

Video and audio inputs for external devices.


S-VIDEO IN 2

Video inputs for external devices with an S-Video output.

2. HEADPHONE

Connect a set of external headphones for private listening.

10-3 Remote Control

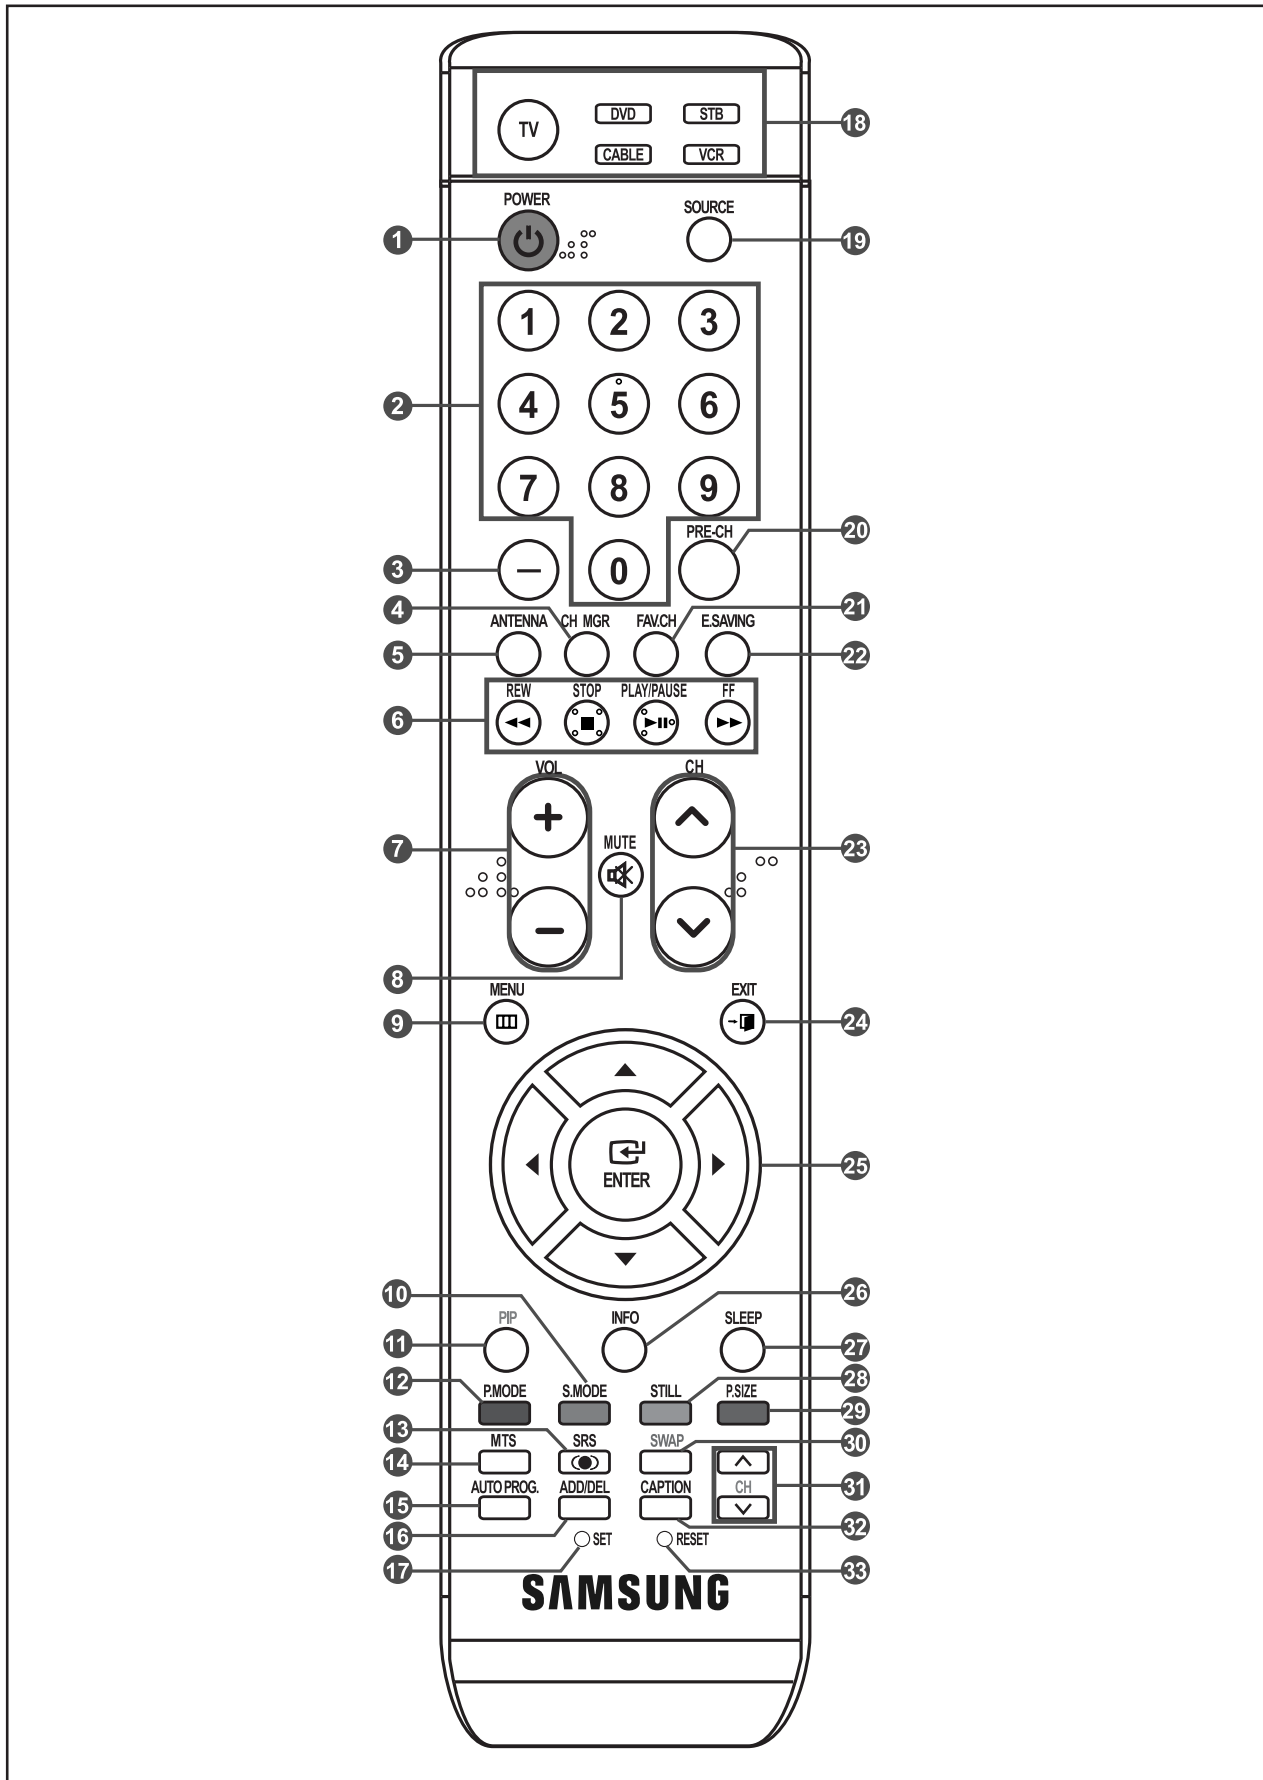

- This is a special remote control for the visually impaired, and has Braille points on the Power, Channel and Volume buttons.

- 1 POWER** 
Turns the TV on and off.
- 2 NUMERIC BUTTONS**
Press to change the channel.
- 3 —**
Press to select additional channels (digital and analog) being broadcast by the same station. For example, to select channel "54-3", press "54", then press "—" and "3".
- 4 CH MGR**
It displays "Channel Manager" on the screen.
- 5 ANTENNA**
Press to select "AIR" or "CABLE".
- 6 VCR/DVD Functions**
 - Rewind
 - Stop
 - Play/Pause
 - Fast/Forward
- 7 VOL + / VOL -**
Press to increase or decrease the volume.
- 8  (MUTE)**
Press to temporarily cut off the sound.
- 9 MENU**
Displays the main on-screen menu.
- 10 S.MODE**
Sound mode selection.
- 11 PIP**
Picture-in Picture ON/OFF.
- 12 P.MODE**
Picture effect selection.
- 13 SRS**
Selects TruSurround XT mode.
- 14 MTS**
Press to choose stereo, mono or Separate Audio Program (SAP broadcast).
- 15 AUTO PROG.**
Press to automatically store selected TV/Cable channels.
- 16 ADD/DEL**
Use to store and delete channels to/from memory.
- 17 SET**
Sets the remote to control your TV, VCR, Cable, DVD, or Set-Top Box
- 18 TV, DVD, STB, CABLE, VCR**
Press to operate your TV, DVD, STB, CABLE (box), or VCR
- 19 SOURCE**
Press to display all of the available video sources.
- 20 PRE-CH**
Tunes to the previous channel.
- 21 FAV.CH**
Press to switch to your favorite channels.
- 22 E.SAVING**
Adjust screen brightness to surrounding environment.
- 23 CH  / CH **
Press to change channels.
- 24 EXIT**
Press to exit the menu.
- 25 UP  / DOWN  / LEFT  / RIGHT  / ENTER **
Use to select on-screen menu items and change menu values.
- 26 INFO**
Use to see information on the current broadcast.
- 27 SLEEP**
Press to select a preset time interval for automatic shut off.
- 28 STILL**
Press to stop the action during a particular scene.
Press again to resume normal video.
- 29 P.SIZE**
Picture size selection.
- 30 SWAP**
Switches the main and sub picture.
- 31 CH**
Displays the available channels in sequence. (These buttons change channels in the PIP window only.)
- 32 CAPTION**
Controls the caption decoder.
- 33 RESET**
When your remote does not work, change the batteries and press the RESET button for 2-3 seconds before use.

➤ This is a special remote control for the visually impaired, and has Braille points on the Power, Channel and Volume buttons.

Memo